

Subject : HOW TO USE YOUR CIGAR HUMIDOR

TYPE OF UNIT : CC064
SERIAL NUMBER : From serial number 42374
DATE OF PRODUCTION : Since 15/09/98



(photo not contractual)

A) INSTALLATION

- 1- Check the packaging of your cigar humidor.
 - 2- Unpack your cigar humidor and make sure there are no visible external defects.
 - 3- Open the door and check that the inside of your unit is in good order.
- If these three points have not been met, please notify the carrier by writing on the delivery note and contact the distributor.
- 4- Move your humidor to the location you have chosen for it.

This location must :


- Be unencumbered and well ventilated.
- Enable a minimum 10 cm space between the wall and the back of the humidor.
- Be well away from any heat source.
- Not be too damp (laundry, pantry, bathroom, etc).
- Have a solid and flat floor.

Subject : HOW TO USE YOUR CIGAR HUMIDOR

- Have a standard and accessible electricity supply (it is not recommended to use a multiple cable plug or an extension lead).

N.B. : Whenever you move your humidor, do not tilt it by more than 45°, and always towards the side of the power cord.

- 5- Unwind the power cord ready for use and position your unit so as to leave a space of 10 cm between the wall and the back of the humidor.
- 6- Place the water recovery tank, that you will find in the accessories pouch of your humidor, at the back of the unit near the compressor.
- 7- Adjust the front feet of the humidor (by screwing in or out) until it is levelled (we recommend the use of a spirit level to do this).
- 8- Check that the plastic cap on the drain pipe at the bottom of the inside back wall (left side) is in the correct position as follows :

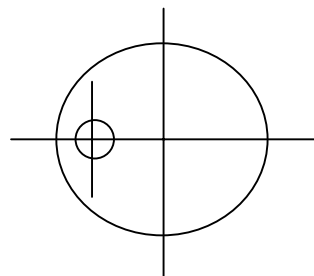

- 9- Then place the three cassettes of lava stone in the bottom tray of the unit and connect them together by the studs.
- 10- Remove the protective devices from inside your humidor.
- 11- Remove the film protection from the charcoal filter that you will find in the accessories pouch of your humidor, and position the filter inside the humidor in the ventilation hole at the top left.
- 12- Secure the handle of your humidor by screwing it in without forcing (in the case of a solid door).
- 13- Arrange the shelves for your own convenience (see pages 8 and 9 of the instructions manual).
- 14- Wait 48 hours before plugging in a humidor which has been delivered.

Subject : HOW TO USE YOUR CIGAR HUMIDOR

N.B. : *This precaution is to avoid breakdown risk.*

We are never sure that the humidor has not been tilted when handled.

Should the humidor be tilted on the wrong side, tilted on the right side but at an angle of more than 45 °, or laid down, the lubricating oil in the compressor can seep into the cooling circuit.

Considering the viscosity of the oil and the small sections inside the cooling circuit, the oil needs time to settle.

If this precaution is not respected, the two major risks are :

- *Compressor breakdown (not enough oil to lubricate it).*
- *Oil plug in the cooling circuit, especially in the capillary pipe. The remaining oil will congeal and prevent refrigeration gas circulating.*

15- Plug your humidor in the power socket, then place the on/off switch to the "on" position and adjust the settings (page 6 and 7 of the instructions manual).

B) ADJUSTING

See the instructions manual pages 6 and 7 to use and adjust your cigar humidor.

The ideal temperature and humidity ranges to preserve your cigars in good conditions are as follows :


Temperature : between 15 to 18 °C (59 to 65 °F).

Humidity : Between 65 to 75 %.

Values given for a surrounding temperature of 20 °C (68 °F).

It is possible, even if the settings in this manual are respected, that you will be unable to obtain the precise temperature/humidity desired. Each case is individual and slight setting adjustments may be necessary.

INSTRUCTIONS TO ADD WATER IN THE LAVA STONE CASSETTES :

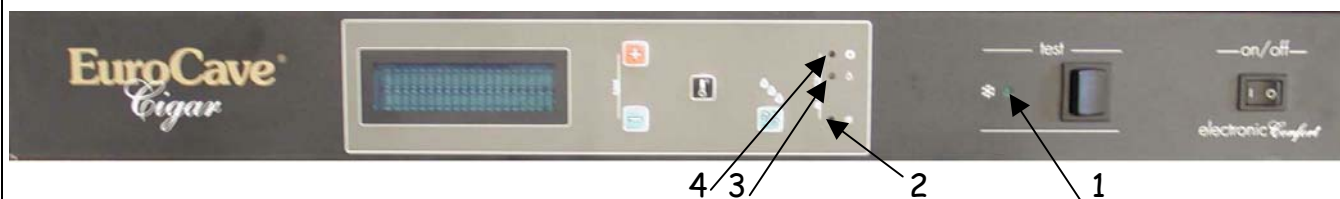


The humidity level displayed on the screen is made to inform you (alarm when it flashes) when there is not enough water to increase the humidity level to the setting value.

Subject : HOW TO USE YOUR CIGAR HUMIDOR

Add 10 cl of water in each lava stone cassette only if the humidity alarm flashes. Then, count the number of days between the first day you add water and the day the humidity level will flash again (function of the surrounding temperature and humidity levels of the room the humidor is installed in). That will give you the period to add water again.

INSTRUCTIONS TO DECREASE THE HUMIDITY LEVEL IN YOUR UNIT :

- 1 - If your unit can not decrease the humidity level, then :
 - Empty your humidor, put the lava stone cassettes outside and clean them.
 - Place the cap of the drain pipe as follows :

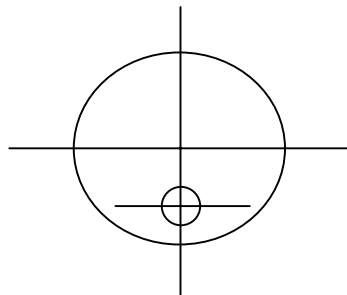

- Set the humidity level to 75 % but don't install the lava stone cassettes or exchange them by new ones. Add water only if the humidity alarm flashes.
- 3 - If this is still not enough to decrease the humidity level, then put the cap of the drain pipe outside of your humidor.
- 4 - Call a technician of your distributor if the problem persists.

N.B. : (See picture of the regulation board)

Marks 1 & 2 : Green lights go on when the compressor works to decrease the temperature.

Mark 3 : Yellow light goes on when the fan works to increase the humidity level.

Mark 4 : Red light goes on when the resistance coil warms up to increase the temperature level.